HENRY®

Made in America and Priced Right

Henry Golden Boy .22LR / .22 MAG / .17HMR

Instruction Manual For All H004 Series Rifles

Warning: You cannot use .22LR cartridges in a .22 Magnum rifle, and you cannot use .22 Magnum cartridges in a .22LR rifle.

Important:
Study this instruction manual carefully before you handle this firearm. After you have studied this manual and understand the instructions, please return the enclosed registration card to us within 30 days of purchase or register online at www.henryrepeating.com/warranty.cfm. **Thank you.**

HENRY®
Made In America and Priced Right

IS A REGISTERED TRADEMARK
OF THE HENRY REPEATING ARMS COMPANY

TEL. **201-858-4400** | FAX. **201-858-4435**
EMAIL. **info@henryrepeating.com**
WEBSITE. **www.henryrepeating.com**

Made in America

WARNING: BEFORE USING FIREARM, READ AND FOLLOW THESE INSTRUCTIONS.
If there is anything you do not understand, get help from someone qualified to teach the safe handling of firearms.

Benjamin Tyler Henry.
His invention: The Henry Rifle.

Welcome and Introduction

Thank you for purchasing your new Henry Lever Action Rifle. We are proud to have crafted this rifle for you in the great tradition of Henry Repeating Arms Company which dates back to 1860 when the first effective, lever-action repeating rifle was developed by our founder, Benjamin Tyler Henry. We go to great efforts to provide the highest quality of design, craftsmanship, manufacture and function that was established over 140 years ago. Your new Lever Action Rifle should provide you and your family with many years of safe enjoyment and pride of ownership.

It is imperative that the following cautions and operating instructions be thoroughly studied and understood before using your new rifle, in order to insure proper and safe gun handling. Failure to follow these cautions, warnings and operating instructions could result in damage to your gun or to other property or could result in injury or death to yourself or to others.

IMPORTANT

Before it left the factory this firearm was tested, carefully inspected and packaged. Henry RAC cannot control product handling after it leaves the factory. Therefore, please examine this firearm carefully at the time of purchase to insure that it is unloaded and undamaged. The dealer will be pleased to assist you in making this examination and will endeavor to answer any questions you may have.

This instruction manual should always accompany this firearm. When you lend, give or sell this firearm, be sure this manual goes with it.

SIMPLE LIMITED LIFETIME WARRANTY

Henry Repeating Arms Company stands behind its products as it has historically. We offer a simple limited lifetime warranty. If you have a problem with a Henry rifle, and it is our fault, we will fix it at any time, and at no charge. The warranty does not cover excessive wear and tear to parts, or accidental damage to parts.

NOTICE

Henry RAC shall not be responsible for injury, death, or damage to property resulting from either intentional or accidental discharge of this firearm, or from its function when used for purposes or subjected to treatment for which it was not designed. Henry RAC will not honor claims involving this firearm which result from careless or improper handling, unauthorized adjustment or parts replacement, corrosion, neglect, or the use of wrong caliber ammunition, or the use of ammunition other than original, high quality, commercially manufactured ammunition in good condition, or any combination thereof. Henry RAC will not honor claims involving this firearm for any reason or cause when such claims are made by the second or subsequent owner.

Whether or not you are experienced in the safe handling of firearms, we urge you to read this entire instruction manual carefully. You must follow the safety instructions for your safety and the safety of others. Should you have any questions concerning the instructions in this manual, please call us at 201-858-4400. When you are thoroughly familiar with the safety instructions in this manual, please return to us by mail the registration card enclosed, which acknowledges that you are familiar with these instructions.

WARNING: If you have little or no experience in the safe handling and operation of a firearm, we strongly urge you to take a firearms safety course from an NRA Certified Instructor or from someone with equivalent qualifications prior to using this or any other firearm. You can contact the NRA Firearms Education and Safety Division at 703-267-1470 for the name of an instructor in your area.

Table of Contents

Warranty 3
Handling Cautions 4
Shooting Cautions 5
Cleaning Cautions 6
Storage 6

Operating Instructions

How To Use the Safety 7
How To Load Your Henry 8
How To Operate Your Henry 8
How To Unload Your Henry 9
How To Adjust Your Sights 9
How To Clean Your Henry 10
Maintenance 10
Parts 11

CAUTIONS:

GENERAL HANDLING CAUTIONS

1. ALWAYS HANDLE YOUR FIREARM AS IF IT WERE LOADED so that you never fire it accidentally when you think it is unloaded.
2. NEVER POINT YOUR FIREARM AT ANYTHING YOU DO NOT INTEND TO SHOOT so that if it fires accidentally, injury, death, or damage to property will be avoided.
3. NEVER TAKE ANYONE'S WORD THAT A GUN IS UNLOADED. Check for yourself with fingers off the trigger and gun pointed in a safe direction so that you never fire the gun accidentally when you think it is unloaded.
4. ALWAYS CHECK TO MAKE SURE YOUR FIREARM IS NOT LOADED WHEN HANDING IT TO ANOTHER PERSON.
5. ALWAYS KEEP AND CARRY YOUR FIREARM EMPTY WITH THE HAMMER IN THE “SAFE” POSITION except when you intend to shoot, so that your firearm cannot be fired when you do not intend to fire it.
6. ALWAYS BE AWARE OF POSSIBLE RISK FROM DROPPING YOUR FIREARM. Some parts of the mechanism could be damaged. You may not see the damage, but it is severe. The firearm may discharge and cause injury, death, or damage to property. If your firearm has been dropped, have it examined by a competent gunsmith before using it again.
7. NEVER LEAVE A FIREARM COCKED AND READY TO FIRE, as this condition is extremely dangerous and the firearm could easily be accidentally discharged, causing injury, death, or damage to property.
8. NEVER LEAVE A LOADED FIREARM UNATTENDED. Someone, especially a child, may fire it and cause injury, death, or damage to property.
9. ALWAYS INSTRUCT CHILDREN TO RESPECT FIREARMS. If you teach your children to shoot or get them trained by a qualified instructor, be certain they know how to use the firearm properly and always supervise them closely. Always stress safety so that your children will not fire a rifle when or where it is unsafe to do so.

RANGE CAUTIONS

10. Always be sure your backstop is adequate to stop and contain bullets before beginning target practice so that you do not hit anything outside the range shooting area. Think! What will you HIT if you Miss the target?
11. ALWAYS PUT A KNOWLEDGEABLE AND RESPONSIBLE PERSON IN CHARGE TO MAINTAIN SAFETY CONTROL WHEN A GROUP IS FIRING ON A RANGE. Obey his commands so that discipline is maintained to reduce the possibility of accidents.
12. ALWAYS CARRY YOUR FIREARM EMPTY WITH THE ACTION OPEN WHILE ON A RANGE until preparing to fire and keep it pointing towards the backstop when loading, firing, and unloading to eliminate the risk of injury, death or damage to property.

LOADING/UNLOADING CAUTIONS

13. ALWAYS BE SURE BARREL, BORE, CHAMBER, AND ACTION ARE CLEAN AND CLEAR OF OBSTRUCTIONS. Clean a fouled firearm immediately so that it will function correctly and safely.
14. ALWAYS USE ONLY CLEAN, DRY, HIGH-QUALITY, COMMERCIALLY MANUFACTURED AMMUNITION IN GOOD CONDITION AND APPROPRIATE TO THE CALIBER OF YOUR FIREARM. Gun and ammunition manufacturers design their products within exacting engineering safety limits. Handloads and remanufactured ammunition are sometimes outside those limits and could blow up the chamber, bolt and receiver of any firearm and cause injury, death or damage to property.

SHOOTING CAUTIONS

15. NEVER DRINK ALCOHOLIC BEVERAGES OR TAKE DRUGS BEFORE OR DURING SHOOTING as your vision, coordination, and judgement could be seriously impaired, making your gun handling unsafe.
16. ALWAYS SEEK A DOCTOR'S ADVICE IF YOU ARE TAKING MEDICATION to be sure you are fit to shoot and handle your firearm safely.
17. ALWAYS WEAR AND ENCOURAGE OTHERS TO WEAR EAR PROTECTION WHEN SHOOTING, especially on a range. Without ear protection, the noise of even one shot from your rifle and from other guns close to you could leave a "ringing" in the ears for some time after firing and the cumulative long term effect could be permanent hearing loss.
18. ALWAYS WEAR AND ENCOURAGE OTHERS TO WEAR PROTECTIVE SHOOTING GLASSES. Flying particles could damage eyes and cause blindness. Protective shooting glasses can prevent such an injury.
19. ALWAYS KEEP THE HAMMER IN THE “SAFE” POSITION UNTIL YOU ARE READY TO FIRE. This will minimize the risk of an accidental discharge.
20. ALWAYS KEEP CLEAR AND KEEP OTHERS CLEAR OF THE EJECTION PORT. Spent cartridges are ejected with enough force to cause injury. The ejection port must also be unobstructed by your hand to insure safe ejection of spent rounds. Never place fingers in ejection port - they could be burned by hot metal or injured by the bolt moving forward.
21. NEVER PUT YOUR FINGER INSIDE THE TRIGGER GUARD UNTIL YOU ARE AIMING AT A TARGET AND READY TO SHOOT. This will prevent you from firing the firearm when it is pointing in an unsafe direction.
22. ALWAYS BE ABSOLUTELY SURE OF YOUR TARGET AND THE AREA BEHIND IT BEFORE YOU SQUEEZE THE TRIGGER. A bullet could travel through or past your target for up to 1½ miles. If in doubt, don't shoot! Think! What will you HIT if you MISS the target?
23. NEVER SHOOT AT A HARD SURFACE SUCH AS ROCK OR A LIQUID SURFACE SUCH AS WATER. A bullet may ricochet and travel in any direction to strike you or an object you cannot see, causing injury, death or damage to property.
24. NEVER DISCHARGE A FIREARM NEAR FLAMMABLE MATERIAL. Flame and sparks erupt from the firearm when discharged. They could start a fire or cause flammable liquids and gasses to explode.
25. NEVER FIRE YOUR FIREARM NEAR AN ANIMAL unless it is trained to accept the noise - an animal's startled reaction could injure it or cause an accident.
26. NEVER INDULGE IN "HORSEPLAY" WHILE HANDLING YOUR FIREARM because doing so could cause an accidental discharge.

27. NEVER WALK, CLIMB, OR FOLLOW A COMPANION WITH YOUR FIREARM COCKED AND READY TO FIRE to eliminate risk of accidental discharge. When hunting, hold your firearm so that you can always control the direction of the muzzle.

MALFUNCTION CAUTIONS

28. **FAILURE TO FIRE:** IF THE FIREARM FAILS TO FIRE DO NOT PUT IT DOWN OR OPEN THE ACTION. ALWAYS HOLD THE FIREARM, KEEPING IT POINTED IN A SAFE DIRECTION AND WAIT 30 SECONDS. IF A HANGFIRE (SLOW IGNITION) HAS OCCURRED, THE ROUND WILL FIRE WITHIN 30 SECONDS. If the round does not fire, remove the ammunition, eject the round and examine the cartridge. If the firing pin indent on the rim is light or non-existent, have the firearm examined by a competent gunsmith before firing again. If the firing pin indent on the rim appears normal (in comparison with similar previously fired rounds) assume you have faulty ammunition. Segregate the misfired round from other live firearm ammunition and empty cases, reload, and carry on firing.

Note: Dispose of misfired rounds in accordance with ammunition manufacturer's instructions.

29. NEVER USE YOUR FIREARM IF IT FAILS TO FUNCTION PROPERLY, AND NEVER FORCE A JAMMED ACTION. Forcing the action could make the round explode, causing serious injury, possible death, or severe damage to your firearm or other property.

CLEANING AND STORAGE CAUTIONS

30. ALWAYS CHECK TO MAKE SURE YOUR FIREARM IS NOT LOADED BEFORE CLEANING, STORING, TRAVELING, LAYING IT DOWN, OR HANDING IT TO ANOTHER PERSON so that it cannot be fired when it is unsafe to do so.

31. ALWAYS KEEP AND STORE YOUR FIREARM AND AMMUNITION IN SEPARATE, LOCKED LOCATIONS, OUT OF REACH AND SIGHT OF CHILDREN AND UNTRAINED PEOPLE to minimize the risk of rifle and ammunition being easily available for loading and firing by unauthorized persons.

STORAGE

CAUTION: ALWAYS UNLOAD YOUR FIREARM FOR STORAGE AND STORE AMMUNITION SEPARATELY. Keep and store your firearm and ammunition securely locked and in separate locations out of reach and sight of children. Children are naturally curious and do not always understand the real danger of guns.

NOTE: Do not store your firearm in an air-tight container, and do not seal or attempt to seal the barrel to exclude dust, as the internal steel surface is more likely to rust or corrode by doing this.

WARNING: When you squeeze the trigger, you must expect the gun to fire and you must take full responsibility for firing it. Your care can avoid accidental discharge and you will thereby avoid accidental injury, death and property damage.

AMMUNITION SELECTION

Henry RAC Firearms are designed to function with a variety of brands and types of factory-manufactured

ammunition in the appropriate caliber but not all ammunition produces the same result. Henry RAC recommends that after you read and understand this manual, you go to the range and fire different ammunition which is appropriate to the caliber of your firearm. Once you find the ammunition which functions best, keep using it. Especially when cutting-edge reliability and accuracy are vital to you. When sighting your rifle, shoot a group to determine point of impact on the target. Then make incremental adjustments to center the point of impact on the target bullseye.

WARNING: DISCHARGING FIREARMS IN POORLY VENTILATED AREAS, CLEANING FIREARMS OR HANDLING AMMUNITION MAY RESULT IN EXPOSURE TO LEAD, A SUBSTANCE KNOWN TO CAUSE BIRTH DEFECTS, REPRODUCTIVE HARM AND OTHER SERIOUS PHYSICAL INJURY. HAVE ADEQUATE VENTILATION AT ALL TIMES. WASH HANDS THOROUGHLY AFTER EXPOSURE.

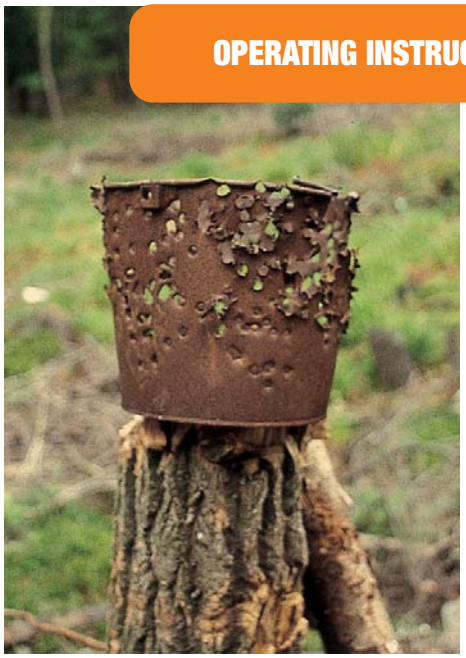

OPERATING INSTRUCTIONS FOR YOUR HENRY MINI BOLT .22 RIFLE

CAUTION: Always keep the muzzle pointed in a safe direction.

EXTREMELY IMPORTANT: YOU MUST BECOME THOROUGHLY FAMILIAR WITH KNOWING HOW TO PLACE THE HAMMER INTO THE SAFETY POSITION WITH THE TRIGGER LOCKED UP. YOU MUST PRACTICE THIS PROCEDURE SEVERAL TIMES WITH AN UNLOADED RIFLE TO BECOME THOROUGHLY FAMILIAR WITH IT.

WARNING: If you have little or no experience in the safe handling of firearms, we strongly urge that you take a firearms safety course from an NRA certified instructor, or from someone with equivalent qualifications. You can contact the NRA Firearms Education and Safety Division at 703-267-1470 for the name of an instructor in your area.

YOU MUST BECOME THOROUGHLY FAMILIAR WITH THE FOLLOWING PROCEDURE. DO NOT ATTEMPT TO OPERATE THIS FIREARM UNLESS YOU KNOW HOW TO PLACE THE HAMMER IN THE SAFETY POSITION.

HOW TO **PLACE THE HAMMER IN THE SAFETY POSITION.**

There are two ways to set the hammer into the Safety position. Always keep the gun pointed in a safe direction. With the hammer in the Fired (down) position (Figure A-3), cock the hammer back slightly about a 1/16th to a 1/8th of an inch, until you feel and hear the hammer click into the Safety position (Figure A-2). The hammer will now be locked into the Safety position and if you pull the trigger to fire, the hammer should not fall.

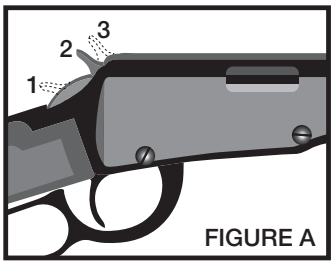

FIGURE A

The second way to set the safety is from the Full-Cock position (Figure A-1). Firmly hold the hammer back with your thumb. While holding the hammer, apply just enough pressure on the trigger to release the hammer from the Full-Cock position. Remove your finger from the trigger very quickly, and slowly lower the hammer into the Safety position.

The hammer will now be locked into the Safety position and, if you pull the trigger to fire, the hammer should not fall. The essential maneuver of setting the Safety this way is to remove your finger very quickly from the trigger

when dropping the hammer into the Safety position.

WARNING: When the chamber is loaded, never place the hammer in the Fired (down) position (Figure A-3).

WARNING: The safety is designed to secure the hammer, holding it from contacting the firing pin. However, this mechanism will not necessarily prevent the accidental discharge of this firearm as a result of jarring, abuse or mishandling.

HOW TO **LOAD YOUR HENRY GOLDEN BOY RIFLE**

Prior to loading your rifle, make certain that the rifle is not already loaded. Point the muzzle in a safe direction, swing the lever down and pull it back. If a cartridge ejects, proceed with directions on how to unload the magazine tube and empty and clear the chamber. We recommend that you always load a completely unloaded firearm and clear the firearm of any cartridges prior to loading.

Assuming that you are now handling an unloaded firearm, make certain that the barrel, receiver and chamber are free from any grease, oil, debris or any other obstruction. Make certain that the ammunition you are about to use is .22 rimfire caliber. Make certain that you are using name-brand, top quality ammunition.

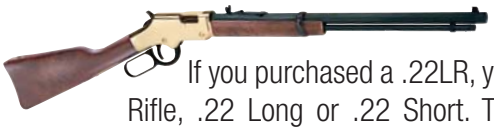

.22 LONG Rifle

If you purchased a .22LR, you can use .22 Long Rifle, .22 Long or .22 Short. The capacity for .22 Long Rifle is 15 rounds, 18 rounds for .22 Long and 20 rounds for .22 Short.

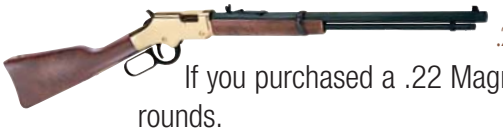

.22 MAGNUM

If you purchased a .22 Magnum, capacity is 12 rounds.

.17HMR

If you purchased a .17HMR, the capacity is 12 rounds.

WARNING: YOU CANNOT USE .22 MAGNUM ROUNDS IN A .22LR OR VICE VERSA.

To load the magazine tube, first place the hammer in the Safety position (see page 7 How to place the hammer in the safety position) you are now ready to load.

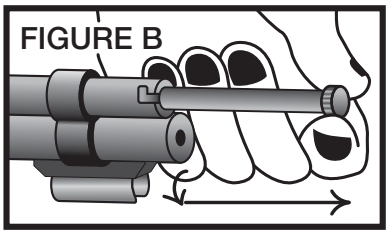

Twist the inner magazine tube by disengaging the magazine button (Figure B) and pulling the tube out until the orange follower (black on magnums) is visible through and clears the loading port in the outer magazine tube. With the muzzle pointed upward, insert the rimmed end of the cartridges into the magazine (Figure C) and allow them to slide down toward the action. Do not exceed the capacity of the magazine. Next, push the inner magazine tube back down into position and lock into place. Please be careful when pushing the inner magazine tube in, as it is under spring tension.

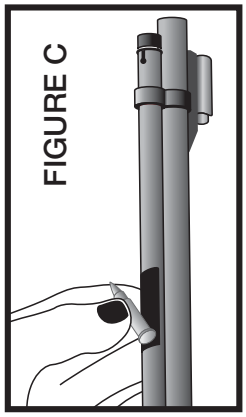

The rifle is now ready for operation.

HOW TO **OPERATE YOUR HENRY GOLDEN BOY RIFLE**

The rifle chamber can now be loaded by swinging the lever down completely and pulling it back to a closed position. **Important: The rifle is now set to fire.** The hammer has been moved from the Safety position to the Full-Cock position. Always place the hammer back into the Safety position until you are ready to fire. When ready to fire, take the hammer from the Safety position. Remove your finger from the trigger, firmly gripping the hammer with your thumb, and draw the hammer back into Full-Cock position.

You are now ready to fire. Take aim, make certain that you are firing in a safe environment that neither you nor any other person is in danger and when on

target, squeeze the trigger.

To chamber the next round, swing the lever down completely and pull it back to the closed position. This process will eject the fired cartridge case from the camber and transfer a new cartridge from the magazine to the chamber. **Important:** This leaves the hammer in a full-cocked, ready to fire position. If you are not ready to fire, go into the Safety position.

When through firing, always place the hammer in the Safety position. Always unload your gun when you have finished shooting, making certain that the magazine and chamber are empty, before putting your gun away.

HOW TO **UNLOAD THE MAGAZINE AND CHAMBER OF YOUR HENRY GOLDEN BOY RIFLE**

To unload the magazine the hammer should be resting in the Safety position. With the rifle pointing upward or in a safe direction, completely withdraw the inner magazine tube from the gun. Tip the rifle downward, allowing the cartridges to slide out into a suitable container. Replace the inner magazine tube. Very carefully, open the action to eject the chambered round, if any. **Cycle the action multiple times to insure and to be positive that no live rounds remain in the chamber. It is best to do a final visual inspection of the chamber area.**

SIGHTING YOUR RIFLE - Before making any sight adjustments, check the tubular magazine and the chamber to make sure your gun is completely unloaded. Place the hammer in the Safe position.

When sighting your rifle, shoot a group to determine point of impact on the target. Then make incremental adjustments to center the point of impact on the target bullseye.

Elevation: Up or down adjustments: To shoot higher, move rear sight up. To shoot lower, move rear sight down.

To adjust for elevation, use your fingertips to gently lift the rear sight notch blade up just enough to free the notched elevator slide so that it can be carefully moved forward or rearward. Move the notched elevator slide forward to shoot lower or rearward to shoot higher.

For fine tuning of your elevation adjustment, The Henry Golden Boy is fitted with a sliding notch plate, with a white diamond centered on it, that can be moved up or down by slightly loosening the screw to allow for finer adjustments. Loosen the screw just enough to allow the sliding notch plate to be pushed up or down under slight pressure to the position you want. Don't forget to retighten it! The up-and-down sliding notch plate, with the centered white diamond, is also reversible. If the U-shaped notch is up, you can turn the notch plate upside down and use the V-shaped notch and vice versa. Use a screwdriver with a blade tip that is the exact length of the screw slot to protect the screw head and surrounding metal from damage.

Windage: Horizontal Adjustment

To move point of impact to the right, tap rear sight base to the left. To move point of impact to the left, tap rear sight base to the right.

The base of the rear sight is dove-tailed into a groove on the barrel. To make horizontal adjustments, the entire dove-tailed base must be moved right or left in its' slot on the barrel. To do this, carefully use a softwood, fiber or plastic dowel, slightly pointed but having a flat point appropriate in size to properly engage the left or right end of the sight base where it slides in the groove on the barrel. Gently tap the dowel with a light hammer and be very careful not to mar or damage the barrel or sight base. To help you determine how far you have moved the sight, right or left, a soft pencil can be used. The front edge of the rear sight base comes to a point where it rests on the barrel. At the point of the sight base, lightly make a small mark with the pencil and carry it straight down to make a small adjoining mark on the barrel. This will show you how far to the right or left you have moved the sight base. When your adjustments are completed, the marks can easily be wiped off with a lightly-oiled, soft cloth.

HOW TO **CLEAN YOUR HENRY GOLDEN BOY RIFLE**

Make certain to clean your rifle after firing. We suggest you purchase a current, top quality rifle cleaning kit of the appropriate caliber. Make sure that the rifle is empty, and open the action. Using a

cleaning rod with a lightly-oiled patch, run the rod from the muzzle end of the barrel down toward the breech area, cleaning the bore and chamber. Use a cleaning swab to remove all debris from the chamber as well as the faces of the bolt and breach. It is important to make certain that there is no debris in the chamber or on the face of the bolt or breach. The balance of the bolt assembly and action are maintenance free.

IMPORTANT – PLEASE NOTE THAT THE RIFLE DOES NOT COME APART FOR CLEANING AND THAT THERE IS NO REASON TO TAKE IT APART FOR CLEANING.

WARNING! DO NOT USE AGGRESSIVE SOLVENTS SUCH AS GUN SCRUBBER. USE ONLY MILD SOLVENTS SUCH AS BREAKFREE, KLEENBORE OR HOPPE'S #9 and a premium quality gun oil.

MAINTENANCE

1. Be sure that your gun is unloaded before attempting to clean.
2. The gun owner is responsible for periodic inspection and proper maintenance by a qualified gunsmith to ensure that this firearm remains in proper adjustment and that worn parts are replaced.
3. **CLEANING WARNING: Remember -** Rust is neglect. Make sure all exposed, blued-metal surfaces are coated with a film of oil. After being subjected to damp weather, thoroughly wipe the bore and exposed metal surfaces. Then apply a new film of oil to the blued-metal surfaces. If exposed to a soaking rain, snow or salt spray a more thorough cleaning and oiling may be necessary, requiring removal of the trigger guard and breech bolt assemblies by a gunsmith.

Important: The Golden Boy's brasslite receiver and brass buttplate should be maintained only by gently wiping with a clean, soft, dustfree cloth. Do not apply solvents, oil or wax to these surfaces..

4. Between seasons, apply a coat of grease to the bore and blued metal parts and store in a dry place. Do not plug the barrel, or store in a case made of fabric or material which will absorb the lubricant from the gun or retain humidity.
5. Make certain to thoroughly clean your firearm when finished with firing. We suggest that you purchase a name-brand, top-quality rifle-cleaning kit.
6. Replacement parts are available through the Henry Repeating Arms Company Parts Department. In the following pages you will find a parts diagram and price list. Please be sure to include the Catalog Number and Serial Number of your gun when ordering parts.Company parts department. In the following pages you will find a parts diagram and price list. Please be sure to include the Model Number and Serial Number of your gun when ordering parts.

CLEANING WARNING
DO NOT USE AN AGGRESSIVE SOLVENT ON THE RECEIVER COVER. WE SUGGEST THAT YOU USE BIRCHWOOD CASEY GUN SHEATH, OR A MILD SOLVENT SUCH AS HOPPE'S NO. 9, KLEENBORE OR BREAKFREE.

ILLUSTRATION
OF PARTS

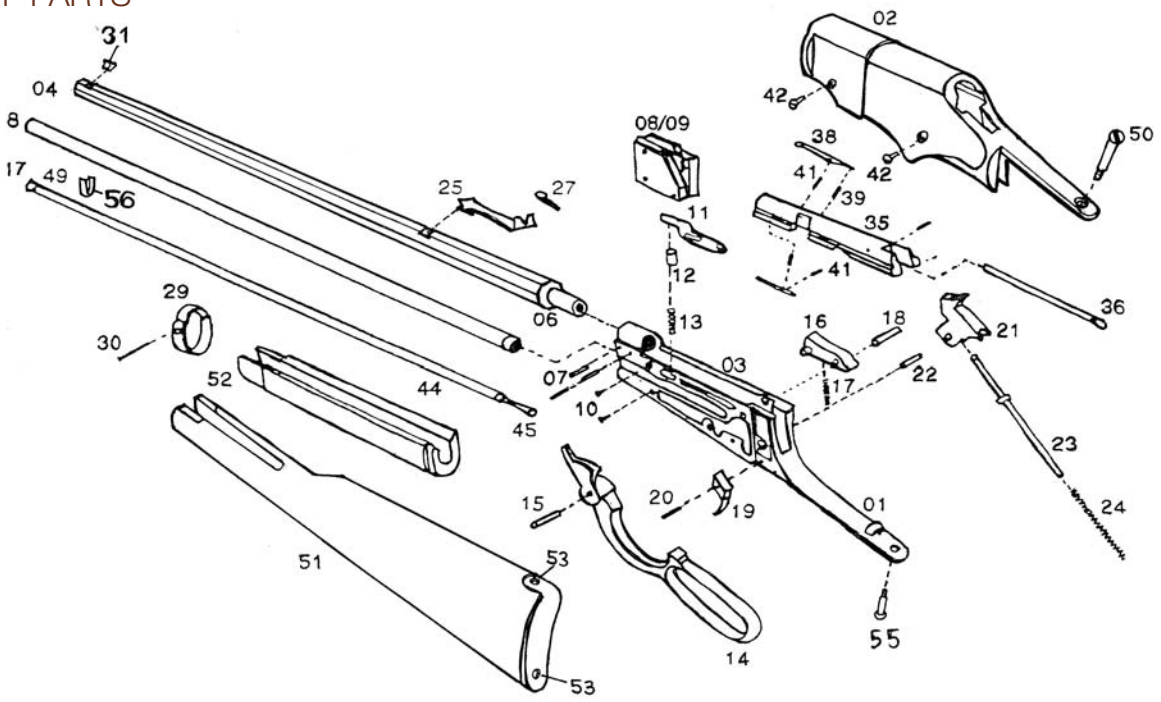

LIST OF PARTS

GB1001	Receiver
GB1002	Cover
HL2203	Carrier Level Axle
GB1004	Barrel
HL2206	Cylinder Pin
HL2207	Taper Pin
HL2208/2209	Carrier
HL2210	Carrier Screw
HL2211	Carrier Feed Lever
HL2212	Carrier Feed Lever Tube
HL2213	Carrier Feed Lever Spring
GB1014	Action Lever
HL2215	Lever Pin
HL2216	Locking Bar
HL2217	Lock Bar Spring
HL2218	Lock Bar Pin
HL2219	Trigger
HL2220	Trigger Spring
HL2221	Hammer
HL222	Hammer Pin
HL2223	Hammer Guide
HL2224	Hammer Spring
GB1025	Rear Sight
GB1029	Barrel Band
GB1030	Barrel Band Screw
GB1031	Front Sight
HL2235	Bolt
HL2236	Firing Pin
HL2237	Firing Pin Spring
HL2238	Extractor
HL2241	EX-EJ Spring
GB1042	Cover Screws
GB1044	Inner Mag Tube
GB1045	Mag. Spring Guide
HL2246	Spring
HL2247	Mag Button
GB1048	Outer Mag Tube
HL2249	Stud Pin
GB1050	Stock Screw
GB1051	Buttstock
GB1052	Forearm
HL2254	Trig Pin
GB1055	Receiver Support Screw
GB1056	Magazine Tube Support

PARTS

An illustration and list of part names are included in this manual. Please note that not all parts are available for sale. Those parts which are available should be installed by a licensed gunsmith. When ordering parts, please give part name and part number.

Important: If you make unauthorized adjustments or use unauthorized parts, Henry Repeating Arms Company will not assume responsibility for the proper functioning of the rifle.

THIS GUN IS MANUFACTURED TO PERFORM PROPERLY WITH THE ORIGINAL PARTS AS DESIGNED. IT IS YOUR DUTY TO MAKE SURE ANY PARTS YOU BUY ARE INSTALLED CORRECTLY AND THAT NEITHER REPLACEMENTS NOR ORIGINALS ARE ALTERED OR CHANGED. YOUR GUN IS A COMPLEX MECHANISM WITH MANY PARTS THAT MUST RELATE CORRECTLY TO EACH OTHER. PUTTING A GUN TOGETHER INCORRECTLY OR WITH MODIFIED OR NON-FACTORY ORIGINAL PARTS CAN RESULT IN A DAMAGED GUN, DANGER AND INJURY OR DEATH TO YOU AND OTHERS THROUGH MALFUNCTION. ALWAYS HAVE A QUALIFIED GUNSMITH WORK ON YOUR GUN AND CHECK ANY WORK THAT YOU THINK WAS NOT PERFORMED BY A QUALIFIED GUNSMITH. We at Henry Repeating Arms Company think this is a small price to pay for firearms safety.

SERVICING AND REPAIR

If you believe that your Henry rifle requires repair or adjustment, we suggest that you first contact our Customer Service by email at info@henryrepeating.com or by phone at 201-858-4400. It may be a problem that we can resolve by phone or by sending a replacement part.

In the unlikely event that your firearm requires adjustments or repair, please make certain that it is unloaded and send it to us at the following address:

HRAC
59 East 1st Street
Bayonne, NJ 07002
Att: Repair Dept.

Enclose an explanation of the problem in as much detail as possible.

Make certain to include your complete name, address, and daytime telephone number. Make sure that the rifle is packaged to prevent it from being damaged. Insure the package and contents against LOSS OR THEFT.

DO NOT INCLUDE "HENRY REPEATING ARMS" IN THE ADDRESS ON THE PACKAGE, IN ORDER TO PREVENT AN INQUISITIVE THIEF FROM BEING ATTRACTED TO IT BY SUCH INFORMATION.

NEW PRODUCTS FROM HENRY

Henry Repeating Arms Company will endeavor to introduce and manufacture other fine firearms, all made in America, of high quality and at affordable prices. If you would like to keep up to date on new products, make certain that you are on our mailing list by returning the enclosed registration card.

Telephone: **201-858-4400** • Facsimile: **201-858-4435**
Email: **info@henryrepeating.com** • Website: **www.henryrepeating.com**